

# **Horizontal Fiber Optic Splice Closure (FOSC)**

# **GPJ83-H07**

# **Installation Manual**



# 1. Scope of application

This Installation Manual is suit for the Fiber Optic Splice Closure (Hereafter abbreviated as FOSC), as the guidance of proper installation.

The scope of application is: aerial, underground, wall-mounting, duct-mounting, handhole-mounting. The ambient temperature ranges from  $-40^{\circ}$ C to  $+65^{\circ}$ C.

# 2. Basic structure and configuration

#### 2.1 Dimension and capacity

Outside dimension (LxWxH)	470x180x125 (mm)
Weight (excluding outside box)	2300g-2975g
Number of inlet/outlet ports	3 (pieces) on each side (total 6 pieces)
Diameter of fiber cable	Φ5—Φ20 (mm)
Capacity of FOSC	Bunchy: 12—96 (Cores) Ribbon: max. 144(Cores)

### 2.2 Main components

No.	Name of	Quantity	Usage	Remarks	
	components				
1	Housing	1 set	Protecting fiber cable splices in	Internal diameter:	
			whole	430x180x63(mm)	
2	Fiber optic	max. 6 pcs	Fixing heat shrinkable protective	Suitable for:	
	splice tray	(bunchy)	sleeve and holding fibers	Bunchy:12,24(cores)	
	(FOST)	max. 4pcs		Ribbon:3 (pieces)	
		(ribbon)			
3	Foundation	1 set	Fixing reinforced core of fiber-		
			cable and FOST		
4	Seal fitting	1 set	Sealing between FOSC cover and		
			FOSC bottom		
5	Port plug	6 pieces	Sealing empty ports		
6	Pressure	1 set	After injecting air, it is used for	Configuration as per	
	testing valve		pressure testing and sealing testing	requirement	
7	Earthing	1 set	Deriving metallic components of	Configuration as per	
	deriving		fiber cable in FOSC for earthing	requirement	
	device		connection		



# 2.3 Main accessories and special tools

No.	Name of accessories	Quantity	Usage	Remarks
1	Heat shrinkable		Protecting fiber splices	Configuration as
	protective sleeve			per capacity
2	Nylon tie		Fixing fiber with protective	Configuration as
			coat	per capacity
3	Insulation tape	1 roll	Enlarging diameter of fiber	
			cable for easy fixing	
4	Seal tape	1 roll	Enlarging diameter of fiber	Configuration as
			cable which fits in with seal	per specification
			fitting	
5	Hanging hook	1 set	For aerial use	
6	Earthing wire	1 piece	Putting through between	
			earthing devices	
7	Abrasive cloth	1 piece	Scratching fiber cable	
8	Labeling paper	1 piece	Labeling fiber	
9	Special wrench	3 pieces	Fixing bolts, tightening nut of	
			reinforced core	
10	Measuring paper	1 piece	To measure circle, of which its	
			diameter is enlarged with seal	
			tape	
11	Buffer tube	to be decided	Hitched to fibers and fixed	Configuration as
		by customers	with FOST, managing buffer	per requirement
12	Desiccant	1 bag	Put into FOSC before sealing	
			for desiccating air.	

# 3. Necessary tools for installation

# 3.1 Supplementary materials (to be provided by operator)

Name of materials	Usage
Scotch tape	Labeling, temporarily fixing
Ethyl alcohol	Cleaning
Gauze	Cleaning



#### 3.2 Special tools (to be provided by operator)

Name of tools	Usage
Fiber cutter	Cutting off fibers
Fiber stripper	Strip off protective coat of fiber cable
Combo tools	Assembling FOSC

# 3.3 Universal tools (to be provided by operator)

Name of tools	Usage and specification
Band tape	Measuring fiber cable
Pipe cutter	Cutting fiber cable
Electrical cutter	Take off protective coat of fiber cable
Combination pliers	Cutting off reinforced core
Screwdriver	Crossing/Paralleling screwdriver
Scissor	
Waterproof cover	Waterproof, dustproof
Metal wrench	Tightening nut of reinforced core


### 3.4 Splicing and testing instruments (to be provided by operator)

Name of instruments	Usage and specification
Fusion Splicing Machine	Fiber splicing
OTDR	Splicing testing
Provisional splicing tools	Provisional testing

Notice: The above-mentioned tools and testing instruments should be provided by the operators themselves.



#### 4. Installation flow chart

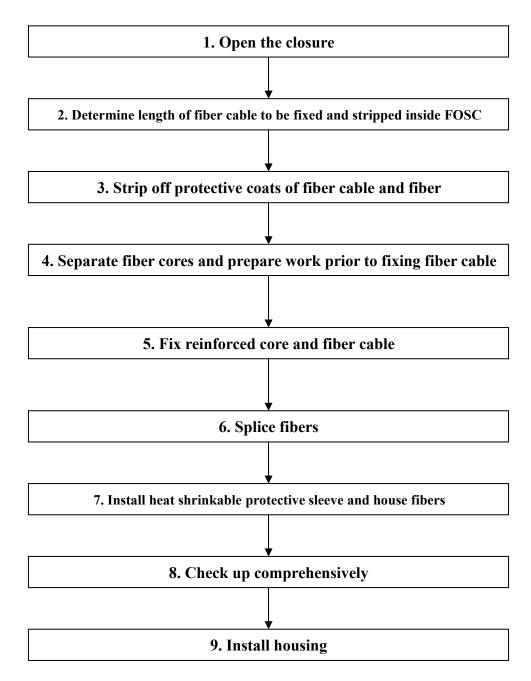

# 5. The process of installing FOSC

#### **Step One - Open the closure**

Cleaning the locale and determine where to install the FOSC and then place

fiber cables required.

Check whether the main components and accessories have been well prepared inside the package.

Open the closure


Unscrew fixing bolts and open the closure by lifting the unscrewed bolts with no need completely unbolting to avoid loosing.

See Drawing 1

Important issues: If the weather condition is not good enough, then a tent must be pitched



for waterproof and dustproof.

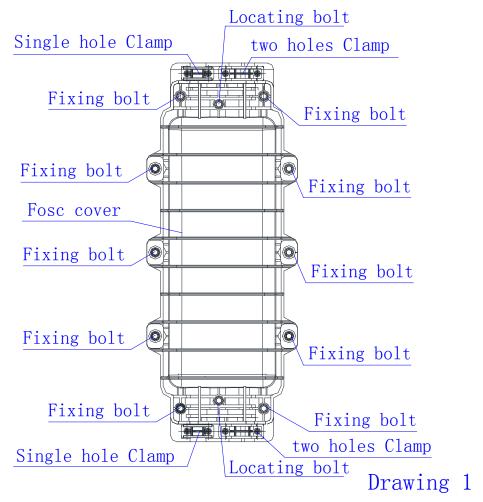


#### 5.2 Step Two -Determine length of fiber cable to be fixed and stripped inside FOSC

- 5.2.1 ①. Fiber cable in 55mm length: the distance from seal fitting to fiber cable pressboard
  - ②. Fiber cable in 2020mm length: it is used to be winded and spliced after stripping.
  - ③. Fiber with protective coat in 420mm length: the distance from the fixing point of fiber cable to the fixing point of FOST (fiber optic splice tray).
  - 4. Fiber in 1600mm length: after stripping off the protective coat, it is to be winded inside the FOST after splicing with other fibers

#### 5.2.2 See Drawing 2

- **Important issues:** 1. Reserve enough length of fiber cable to be spliced.
  - 2. Stripping length also could be decided by customers according to installation requirement

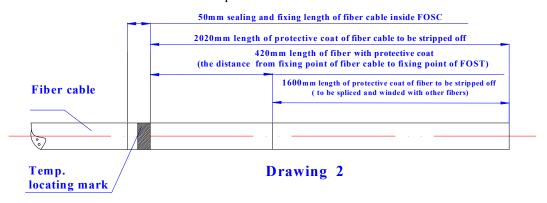




#### 5.3 Step Three – Strip off fiber protective coat of fiber cable and fiber

- 5.3.1 Strip off protective coat of fiber cable from the temp. locating mark with the cutter and the stripper, please refer to Drawing 2 for stripping length. Stripping length also could be decided according to installation requirement
- 5.3.2 See Drawing 3.

**Important issues**: If it is difficult to pull all the protective coat of fiber cable at one time, strip it off section by section to avoid fiber breakage.

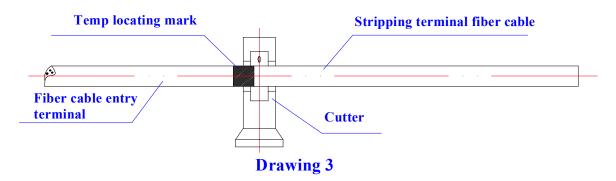


#### 5.4 Step Four – Separate fiber cores and prepare work prior to fixing fiber.

- 5.4.1 Wind 2 layers of insulation tape on protective coat of fiber core. Meanwhile, get rid of the stuffing to separate fiber core and clean them. Form a ring with the diameter of 100mm or so and fix it on the fiber temporarily by adhesive tape.
- 5.4.2 This FOSC is provided with six inlet/outlet ports. Number of fiber cables is determined by the customers according to their actual requirements and the corresponding number of port plugs should be taken out. The max number of fiber cables to be installed is six.
- 5.4.3 This FOSC is suitable for the following diameters of fiber cables respectively:
  - Port A: suitable for fiber cable with max. external diameter φ20mm
  - Port B: suitable for fiber cable with max. external diameter \$\ph\$16mm
  - Port C: suitable for fiber cable with max. external diameter φ13mm
- 5.4.4 The corresponding inlet/outlet ports are to be selected according to fiber cables actually installed. When the diameter of fiber cable is smaller than that of the inlet/outlet port, then the sealing tape should be used to enlarge the external diameter of fiber cable, of which the perimeter could be measured by measuring paper marked by Hole A, Hole B, Hole C, coming as accessories.
- 5.4.5 Reserve reinforced core in 40mm length and cut off the unnecessary ones.
- 5.4.6 See Drawing 4

**Important Issues**: 1. Before the seal tape is used for enlarging the fiber cable diameter, it shouldbe scratched and to be cleaned with abrasive cloth and ethyl alcohol.

2. Cut off reinforced core with a special cutting plier.

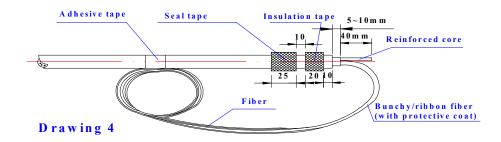




#### 5.5 Step Five - Fix reinforced core and fiber cable

- 5.5.1 Upon finishing the above steps, then demount port plugs, pressboard and fixing nut of reinforced core.
- 5.5.2 Tighten fiber cable pressboard. If the diameter of fiber cable is not long enough, then enlarge it with insulation tape.
- 5.5.3 Tighten nut of reinforced core with the special wrench (plastic) and then retighten it with the metal wrench.(the metal wrench should be provided by operator).
- 5.5.4 See Drawing 5

**Important issue**: Make sure to check whether the fiber cable stripped fits in with the fixing ports or not. If not, the adjustment should be done in time. Otherwise it will affect installation quality.

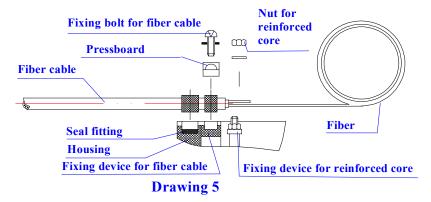

#### 5.6 Step Six - Splice fibers


5.6.1 Follow user manual of fusion splicing machine to splice fiber cores.

Important issue: pay attention to the twist and bend of fiber.

#### 5.7 Step Seven -Install heat shrinkable protective sleeve and house fibers

- 5.7.1 When having completed splicing the fibers, the first fiber ring should be housed on the farthest side of FOST, the remaining fiber should be winded, forming a ring with diameter not less than 80mm. then put it into FOST (Fiber Optic Splice Tray) together with heat shrinkable sleeve for splice protection.
  (Firstly fix heat shrinkable protective sleeve into the slot, then enlarge the diameter of fiber ring properly.)
- 5.7.2 see Drawing 6

**Important issue**: pay attention to the twist and bend of fiber.

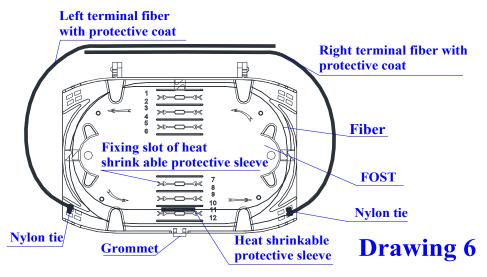




#### 5.8 Step Eight - Check up comprehensively

To ensure the technical requirements, the following instructions must be followed:

- 5.8.1 The fibers in the FOST are spliced and installed orderly. The curved diameter of fiber meets with the technical requirements.
- 5.8.2 The internal tighteners are tightened.
- 5.8.3 The inlet/outlet ports without fiber cables must be blocked up with the port plugs.
- 5.8.4 Control the amount of seal tape within a proper range.
- 5.8.5 Seal fitting is installed neatly and smoothly.
- 5.8.6 Seal the cover of seal fitting
- 5.8.7 See Drawing 7

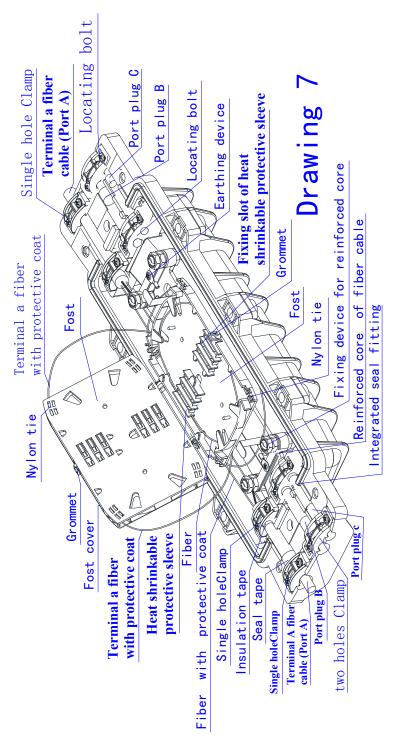




#### 5.9 Step Nine – Assemble FOSC housing

- 5.9.1 Put the FOSC cover on the FOSC bottom directly.
- 5.9.2 Put two pieces of insert plates into the slot.
- 5.9.3 Insert two pieces of locating bolt of FOSC and tighten it with the special wrench.
- 5.9.4 If the FOSC is for aerial application, then put the hanging hook on one side of the closure and then tighten fixing bolts on both sides. Otherwise tighten the four fixing bolts on four corners respectively.
- 5.9.5 See drawing 8

**Important issues**: cleaning the housing and pay attention to the above sequence.

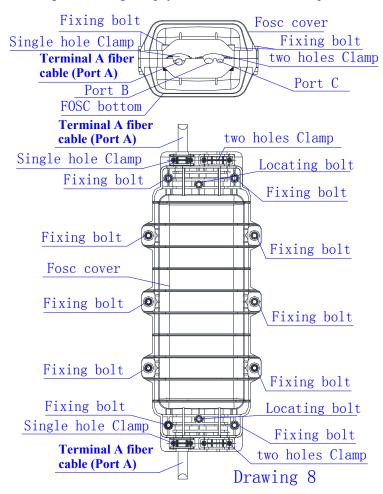

6. Fiber Optic Splice Closures (FOSC) inspecting and testing items

	, , ,	Inspecting type	
Inspecting item	Technical Requirements	Routine test (Before leaving factory)	Type test
Package	Each small package contains one fiber optic splice closure, together with its accessories, tools, installation manual and packing list.		At least
Appearance	Intact in shape, no burrs, bubbles, chaps, pores, warps, impurities and other defects, all background colors should be even and continual.	full	3 sets sampled each
Sign	There is a clear sign on the housing, such as name and model of the product, etc.		time



	The fibers reserved are to be winded in fiber optic splice tray		
Fiber storage	(FOST), the length of fibers housed in FOST is ≥1.6m, the curved		
device	radius is >30mm. During the installation and maintenance, there		
Fil. 4 to 1	should be no attenuation on fibers.		
Electrical	Inside FOSC: metallic components of fiber cables has the functions		
jointing	of electrical putting through, earthing connection and disconnecting.		
device	It is possible to install earthing deriving device outside the housing		
	After sealing according to the stipulated operation procedures, the injected air pressure is $100\text{KPa} \pm 5\text{Kpa}$ , when immersed in clean	At least 3	
Sealing	water of normal temperature for 15 minutes, there should be no air		
performance	bubbles, then observed for 24 hours, there should be no change of		
	air pressure.	sets	
	After reopening and resealing according to the stipulated operation	sampled	
		each time	
Re-sealing	procedures, the injected air pressure is $100\text{KPa} \pm 5\text{Kpa}$ , when immersed in clean water of normal temperature for 15 minutes,		
performance	there should be no air bubbles, then observed for 24 hours, there		
	should be no change of air pressure.		
	Bearing pull is $\geq 800$ N at axle orientation, there should be no		
Pull	breakage on the housing.		
	Bearing pressure of 2000N/10cm for 1 minutes, there should be no		
Punching	breakage on the housing		
	Bearing impact energy of 16N • m, 3 times of impacts there should		
Impact	be not breakage on the housing		
	The spot between the FOSC and seal fitting can bear bending		
Bending	tension of 150N at bending angle of $\pm$ 45° for 10 circles, there		
Denuing	should be no breakage on the housing		
	Bearing torsion 50N•m, 10 circle at torsion angle±90 <sup>0</sup> ,		
Torsion	There should be no breakage on the housing.		
	Injected air pressure of 60KPa $\pm$ 5 KPa, the temperature circle		
	ranging from -40 $^{\circ}$ C $\sim$ +65 $^{\circ}$ C , 10 times of the circular tests (one		
	circular consists of high temperature for 2 hours + indoor		
Temperature	temperature for 2 hours + low temperature for 2 hours + indoor		At least
circle	temperature for 2 hours ) when the pressure declines, the amplitude	At least 3	3 sets
	is $\leq$ 5Kpa, immerse the swatch in clean water of normal	sets	sampled
	temperature for 15 minutes, there should be no air bubbles.	sampled	each
	After sealing the FOSC according to the stipulated operation	each time	time
Voltage	procedures, immerse it in clean water of normal temperature in		
resistance	1.5m depth for 24 hours, there should be no breakdown or arc over		
strength	between the metallic components of the FOSC, between metallic		
	components and the ground at DC 15KV for 1 minutes.		
Isolating	After sealing the FOSC according to stipulated operation procedure,		
resistance	immerse it in clean water in 1.5m depth for 24h, the isolating		
	resistance between the metallic components of the FOSC, between		
	the metallic components and the ground should be $\geq 2 \times 10^4 \text{M} \Omega$ .		
	the metallic components and the ground should be $\geq 2 \times 10^4 \text{M} \Omega$ .		